

SAFETY REMINDERS & OTHER USEFUL TIPS

1. This machine is not a toy, therefore children should not be allowed to operate it.
2. Make sure your InstantCard is placed on top of a sturdy surface before use & that the electrical cord is securely attached to a wall outlet (110V).
3. Keep hair, fingers, jewelry and all loose clothing away from all moving parts of your InstantCard as they may accidentally be pulled into the machine causing damage to it or worse, injury to the user.
4. Never operate your InstantCard near water or any type of liquid to reduce the risk of electric shock.
5. Do not insert more than 1 sheet into the InstantCard for this may damage the blades.
6. Use a test sheet to determine the proper alignment for the 1st and 2nd cut. Make the necessary adjustments in steps 2 and 4 if needed.
7. Periodically check the electrical cord of your InstantCard for any visible sign of damage and avoid using it when it is present.
8. Turn OFF your InstantCard between cuts for ease of aligning your sheets on the feed trays.
9. Periodically check and the blades to ensure paper strands do not get caught on them.
10. Protect your InstantCard keeping it from the elements such as water or excessive heat.
11. Your InstantCard should not be used other than its intended purpose and function.
12. Always call the authorized dealer first for technical issues or any malfunction. Trying to fix the machine by yourself might not only be dangerous, but may also void the warranty.

WARRANTY INFORMATION

Our machines are guaranteed against defects in materials and workmanship for a period of 90 days from the date of original purchase from an authorized dealer of TAMERICA PRODUCTS, INC. If you perceive or experience any issue with the machine, kindly report it to the dealer within 10 business days of said purchase to avail of free pickup and redelivery from TAMERICA's Service Center. After the first 10 days, you will either receive service instructions and parts via mail free of charge for the duration of the warranty.

Note that when returning the machine for warranty claims, the machine should be returned in its complete original packaging to avoid incidental or consequential damages that may void the claim. A copy of the invoice or other proof of purchase also needs to be sent with the machine.

Upon evaluation of the machine and the determination of the actual defect, the machine will be restored to its regular working condition by the Service Center and shipped back to you free of charge. If you change your mind and simply want to return the machine, a 20% restocking fee is charged even within the 10-day grace period. Further, you will have to cover freight to return the machine and it has to be in brand-new resalable condition, otherwise, you might incur more charges.

This warranty covers all defects incurred in the normal use of the equipment except in the following cases:

1. Loss or damage to the equipment due to improper operation, abuse, mishandling or failure to follow the operating instructions.
2. Removal or alteration of the serial number.
3. The machine being serviced or modified by anyone other than a certified technician authorized by TAMERICA.

This warranty is valid only in the 48 Contiguous States, Hawaii and Alaska excluded.



InstantCard Electric Business Card Slitter




OPERATING MANUAL

IMPORTANT !!!

It will be beneficial to first get yourself acquainted with the features of your InstantCard before attempting to use. Keep in mind all operational instructions, tips, and safety reminders every time you use your InstantCard to best achieve desirable results.

FEATURES

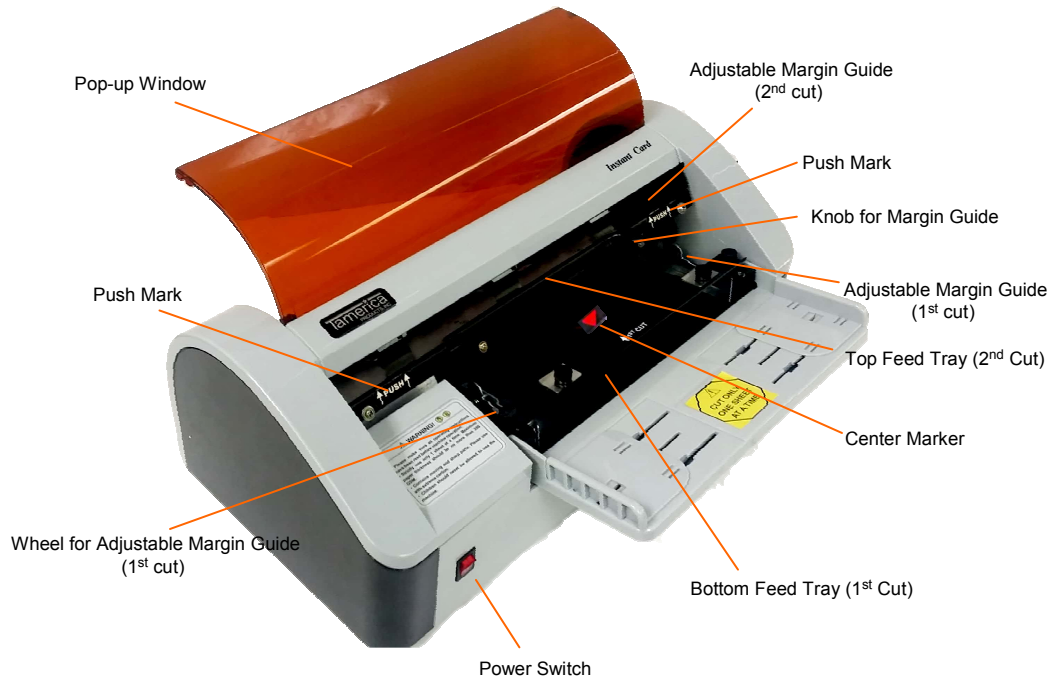

SPECIFICATIONS

Power Supply	: AC100V-120V/50HZ-60HZ
Feed Style	: Horizontal
Cutting Style	: Bleed
Max Sheet Thickness	: 350 GSM
Sheet Size	: 8.5" x 11"
Finished Card Size	: Letter (216 * 279) 3.5" x 2"
Cards Per Sheet	: 10
Cutting Speed	: 30 – 40 cards per minute
Machine Dimensions	: 16.75" x 11.75" x 7"
Shipping Dimensions	: 19" x 11" x 9"
Machine Weight	: 20.9lbs (9.5kgs)
Warranty	: 90 days

For safety reminders and other useful tips on the proper operation of your InstantCard, please turn to the back page.

MACHINE OPERATION




1. Insert a Test Sheet on the bottom feed tray in preparation for the 1st cut. Keep in mind the sheet must be centered along the tray using the center marker as a guide (next slide). NOTE: The power switch should be in the OFF position at this time.




3. With your InstantCard still powered OFF, collect the cut sheets from the back and insert one ½ sheet on the top feed tray in preparation for the 2nd cut.




5. Turn the power back ON then push the tray forward on the Push Marks. Turn the slitter OFF when the cards clear the blades.

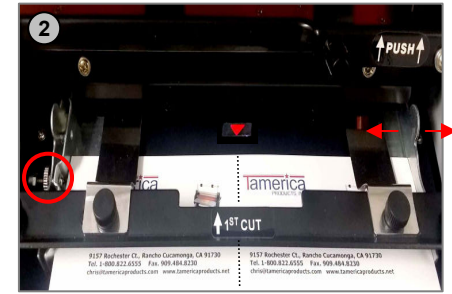

2. Adjust the margin guides to center the sheet on the tray by rotating the wheel on the left & moving the guide on the right. Slide the power switch to the ON position and slowly feed the sheet thru for the 1st cut then turn it OFF.

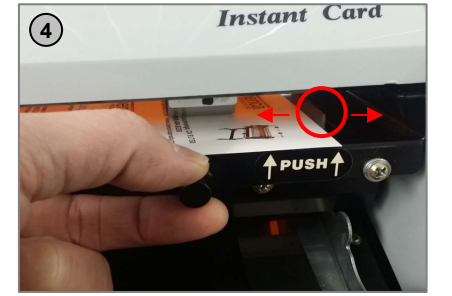

4. Align the sheet along the adjustable margin guide. To make adjustments, turn the knob in either direction.

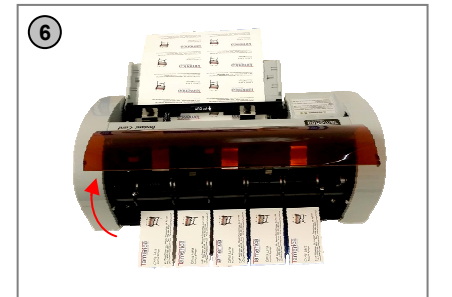

6. Collect the finished cards and check the alignment of the cuts. Repeat step 4 and make adjustments if needed. Periodically lift the pop-up window to clear the cutter of any paper strands that may get caught between the blades.